

Using AutoConvergence



PSpice Application Note | V2



Table of Contents

1	Introduction	3
2	Demo Project	4
3	Convergence Problem	5
4	Using AutoConvergence	7
5	Bibliography	9



1 Introduction

This Application Note describes briefly the convergence problem and introduce the AutoConvergence feature of PSpice.

In order to calculate the bias point, DC sweep and transient analysis for analog devices, PSpice must solve a set of nonlinear equations which describe the circuit's behaviour. This is accomplished by using an iterative technique, the Newton-Raphson algorithm, which starts by having an initial approximation to the solution and iteratively improves it until successive voltages and currents converge to the same result.

The Newton-Raphson method can be described as follows:



We want to find successively better approximations to the roots of a function f(x). With the first guess x_0 we begin to find a better approximation x_1 .

$$x_1 = x_0 - \frac{f(x_0)}{f'(x_0)} \tag{1}$$

Where $f'(x_0)$ is the derivative of the function at x_0

Further we have

$$x_{n+1} = x_n - \frac{f(x_n)}{f'(x_n)}$$
(2)

In order to guarantee the convergence of a solution, some conditions must be considered.

- The nonlinear equations must have a solution.
- The equations must be continuous.
- The algorithm needs the equations' derivatives.
- The initial approximation must be close enough to the solution.



FlowCAD

- Voltages and currents in PSpice are limited to +/-1e10 volts and amps.
- Derivatives in PSpice are limited to 1e14.
- The arithmetic used in PSpice is double precision and has 15 digits of accuracy.

In few cases PSpice cannot find a solution to the nonlinear circuit equations. This is generally called a "convergence problem" because the symptom is that the Newton-Raphson repeating series cannot converge onto a consistent set of voltages and currents.

If you use the transient analysis, and it is the case that the voltage or the current in the circuit moves too fast, it may be unable to continue because the time step required becomes too small.

Normally if you face the convergence problem in PSpice, you have to change the runtime parameters to relax the limits. With the help of the following demo-circuit we will discuss how you can try to solve the convergence problem manually and how to use the AutoConvergence feature of PSpice to converge the simulation automatically.

2 Demo Project

The example circuit we would like to build up is a DC-DC converter. This circuit in the project AutoConverge.opj is created as follows:



The N-Channel Power MOSFET M1 switches on and off, the energy from DC source V1 can be saved in capacitors and inductors. The AC voltage of L3 will be transformed to the secondary side of the transformer T1. The diodes D1 and D2 rectify the AC voltage and the capacitor C4 will be charged with the rectified voltage. The amplifier LM324 and the PWM controller SG1843 are responsible for the control of M1. The feedback voltage V-F will be compared with the reference voltage V-R and the result V-In will determine the gate voltage V-G of M1.



3 Convergence Problem

We can, for example, simply run the transient analysis for 10ms. However, the simulation will abort and the **PSpice Runtime Settings** window comes up.

PSpice Runtime Settings				23
	Use Original Value	Change To		
Relative accuracy of V's and I's:	V 0.001	0.001	(RELTOL)	ОК
Best accuracy of currents [amps]:	🔽 1e-012	1e-012	(ABSTOL)	OK & Resume Simulation
Best accuracy of voltages [volts]:	📝 1e-006	1e-006	(VNTOL)	Canad
Minimum conductance for any branch [1/ohm]:	📝 1e-012	1e-012	(GMIN)	
Run to time [seconds]:	V 0.01	0.01	(TSTOP)	Help
Maximum step size [seconds]:			(TMAX)	
DC and bias "blind" iteration limit:	📝 150	150	(ITL1)	
DC and bias "best guess" iteration limit:	20	20	(ITL2)	
Transient time point iteration limit:	V 10	10	(ITL4)	
Autoconverge	\bigcirc	Settings		
Enable Advanced Convergence Algorithms		Settings		

If you look at the PSpice output file, you can see an error is reported as follows:

ERROR(ORPSIM-15138): Convergence problem in transient analysis at Time = 89.98E-6. Time step = 46.56E-21, minimum allowable step size = 1.000E-18

You can check **Autoconvergence** and **Enable Advanced Convergence Algorithms** and click on **OK & Resume Simulation**. The simulation will continue where it stopped and readjust automatically the Runtime settings.

If you don't want to use the Autoconvergence, you can readjust the Runtime Settings manually. PSpice uses by default the original value of the runtime parameter. The following table describes these parameters.

- RELTOL Relative tolerance of voltage and current
- ABSTOL Absolute current tolerance
- VNTOL Absolute voltage tolerance
- GMIN Minimum conductance for any branch
- TSTOP Run to time, for the demo circuit it is set to 10ms
- TMAX Maximum step size, if you don't define it in Simulation Profile, it is by default set to TSTOP/50
- ITL1 Limit of iterations of convergence calculation during bias point analysis
- ITL2 Limit of iterations during DC analysis
- ITL4 Limit of iterations at any repeating point in transient analysis

The hardest part of the whole process is getting started, that is, finding the bias point. Therefore we will then run the bias point simulation. In the PSpice Run Time Setting click **OK** or **Cancel** to close this window.

FlowCAD

In Simulation Settings window select the Bias Point as Analysis type.

eneral Analysis	Configurat	tion Files	Options	Data Collection	Probe Window	
nalysis Type: Nas Point Time Domain (Transient) OC Sweep C Sweep/Noise Nas Point Save Bias Point Load Bias Point		Output File Incli and Peri Out Froi To (e Options — ude detailed b semiconduct form Sensitivit put variable(s culate small-s m Input source Dutput variable	bias point informat ors (.OP) by analysis (.SENS): ignal DC gain (.TF e name: e:	ion for nonlinear controlled s	ources

Click **OK** and run the bias point simulation.

The bias point simulation runs without any convergence problems. Once a bias point is found, it moves on to run the transient analysis. It starts from a know solution (bias point) and steps forward in time.

Changing back to run the transient simulation and the simulation will abort again. In order to resolve the convergence problem, we will try to relax the limits for some runtime parameters.

	Use Original Value	Change To		
Relative accuracy of V's and I's:	0.001	0.01	(RELTOL)	OK
Best accuracy of currents [amps]:	📝 1e-012	1e-012	(ABSTOL)	OK & Resume Simulation
Best accuracy of voltages [volts]:	📝 1e-006	1e-006	(VNTOL)	Cancel
Minimum conductance for any branch [1/ohm]:	📝 1e-012	1e-012	(GMIN)	Caricei
Run to time [seconds]:	V 0.01	0.01	(TSTOP)	Help
Maximum step size [seconds]:	\checkmark		(TMAX)	
DC and bias "blind" iteration limit:	V 150	150	(ITL1)	
DC and bias "best guess" iteration limit:	20	20	(ITL2)	
Transient time point iteration limit:	🗆 10 +>	100	(ITL4)	
Autoconverge		Settings		
Enable Advanced Convergence Algorithms		Cattings		

In the **PSpice Runtime Settings** dialogue window, uncheck the **Use Original Value** check box for **RELTOL** and set its value to 0.01.

FlowCAD

Uncheck the **Use Original Value** check box for **ITL4** and set its value to 100. This increase the number of transient iterations that PSpice will attempt at each time point before it gives up.

Note

You cannot specify a value that is less relaxed than the normal limit. For example, if the limit for ITL1 is set to 150, you cannot specify 120 as the relaxed limit.

Click **OK & Resume Simulation** to continue the simulation from where it left off. However, we still have the convergence error. Change the runtime parameters with the relaxed limits as follows:

PSpice Runtime Settings				×
	Use Original Value	Change To		
Relative <u>a</u> ccuracy of V's and I's:	0.001	0.05	(RELTOL)	ОК
Best accuracy of currents [amps]:	🔲 1e-012	1e-06	(ABSTOL)	OK & Resume <u>S</u> imulation
Best accuracy of voltages (volts):	🔲 1e-006	1e-003	(VNTOL)	Cancel
Minimum conductance for any branch [1/ohm]	: 📝 1e-012	1e-012	(GMIN)	
<u>R</u> un to time [seconds]:	V 0.01	0.01	(TSTOP)	Help
<u>M</u> aximum step size [seconds]:			(TMAX)	
DC and bias "blind" iteration limit:	V 150	150	(ITL1)	
DC and bias "best guess" iteration limit:	V 20	20	(ITL2)	
Transient time point iteration limit:	1 0	1000	(ITL4)	
Autoconverge		S <u>e</u> ttings		
Enable Advanced Convergence Algorithms		Settings]	

Click **OK & Resume Simulation** to continue the simulation. This time PSpice runs without any convergence problems.

Although the convergence problem is resolved, sometimes it could be very time consuming and you need some understanding of the runtime parameters. Next you will see how you can set Autoconvergence feature of PSpice before you start the simulation.

4 Using AutoConvergence

When you run the simulation with AutoConvergence, PSpice initially runs using the original values for the specified simulation time. However, if the simulation does not converge, PSpice changes the values within the relaxed limit for the run time parameters selected in the **AutoConvergence Options** dialogue box.



Open the simulation profile and click the **Options** tab.

eneral Analysis Configura	tion Fil	es Options Data Co	Ilection Probe Windo	W
⊡ Analog Simulation General		Name	Value	Default Value
MOSFET Option		ITL1	1000	1000
Analog Advanced	R	ITL2	1000	1000
General		ITL4	1000	1000
Transient	R	RELTOL	0.05	0.05
Gate Level Simulation	R	ABSTOL	1.0E-6	1.0E-6
General	R	VNTOL	.001	.001
Advanced		PIVTOL	1.0E-10	1.0E-10
General				

Click on **Reset** to bring back all of the original values of the parameters. Then click the **AutoConverge** button, the **AutoConverge Options** dialogue box pops up. Check the **AutoConverge** check box to active the relaxed limits.

Click **OK** to accept the new relaxed limits and run the simulation. PSpice will run to completion without reporting any convergence problems.

In the Probe window add traces for V-Out, V-In and V-G. The curves are displayed as follows:







In this diagram you will see, the output voltage V-Out, which is the voltage that crosses the capacitor C4, increases because of the charge of C4. The feedback voltage V-F increases but it is still smaller than the reference voltage V-R. As long as V-F < V-R, V-In stays at a low voltage level and the gate voltage V-G turns M1 on more periodically.

When V-F > V-R, V-In changes to have the high voltage level, the Power MOSFET M1 switched periodically off more and the output voltage V-Out decreases because of the discharge of C4. V-F decreases also. As long as V-F > V-R, V-In stays at a high voltage level and the capacitor C4 will continue to be discharged through R9. When V-F < V-R, M1 switches on to start the charge process for C4 and the output voltage V-Out increases.

The capacitor C4 will be periodically charged and discharged and the output voltage V-Out will increase and decrease accordingly. However, the output voltage will be kept at a certain DC voltage level.

We can add the current trace I(C4) for the capacitor and zoom in to have a better observation.



In the diagram above you can see how C4 will be charged while M1 switches on.

5 Bibliography

- [1] PSpice User's Guide, Cadence
- [2] OrCAD Capture User's Guide, Cadence
- [3] Leistungselektronische Schaltungen, D. Schröder, Springer
- [4] http://en.wikipedia.org/wiki/Newton%27s_method